

ATTO D4

INSTALLATION INSTRUCTIONS

COPYRIGHT

Electrex is a trademark of Akse S.r.l. All rights reserved.
It is forbidden to duplicate, adapt, transcript this document without Akse written authorization, except when regulated accordingly by the Copyright Laws.

WARRANTY

This product is covered by a warranty against material and manufacturing defects for a period of 24 months period from the manufacturing date.

The warranty does not cover the defects that are due to:

- Negligent and improper use
- Failures caused by atmospheric hazards
- Acts of vandalism
- Wear out of materials
- Firmware upgrades

Akse reserves the right, at its discretion, to repair or substitute the faulty products

The warranty is not applicable to the products that will result defective in consequence of a negligent and improper use or an operating procedure not contemplated in this manual.

RETURN AND REPAIR FORMALITIES

Akse accepts the return of instruments for repair only when authorized in advance. The transport costs are at customer charge.

RE-SHIPING OF REPAIRED PRODUCT

The terms for re-shipment of repaired products are ex-works, i.e. the transport costs are at customer charge.

Products returned as defective but found to be perfectly working by our laboratories, will be charged a flat fee to account for checking and testing time irrespective of the warranty terms.

SAFETY

This instrument was manufactured and tested in compliance with IEC 61010 class 2 standards for operating voltages up to 250 VAC rms phase to neutral.

In order to maintain this condition and to ensure safe operation, the user must comply with the indications and markings contained in the following instructions:

- When the instrument is received, before starting its installation, check that it is intact and no damage occurred during transport.
- Before mounting, ensure that the instrument operating voltages and the mains voltage are compatible then proceed with the installation.
- The instrument power supply needs no earth connection.
- The instrument is not equipped with a power supply fuse; a suitable external protection fuse must be foreseen by the contractor.
- Maintenance and/or repair must be carried out only by qualified, authorized personnel
- If there is ever the suspicion that safe operation is no longer possible, the instrument must be taken out of service and precautions taken against its accidental use.
- Operation is no longer safe when:

- 1) There is clearly visible damage.
- 2) The instrument no longer functions.
- 3) After lengthy storage in unfavorable conditions.
- 4) After serious damage occurred during transport

The instruments must be installed in respect of all the local regulations.

OPERATOR SAFETY

Warning: Failure to observe the following instructions may lead to a serious danger of death.

- During normal operation dangerous voltages can occur on instrument terminals and on voltage and current transformers. Energized voltage and current transformers may generate lethal voltages. Follow carefully the standard safety precautions while carrying out any installation or service operation.
- The terminals of the instrument must not be accessible by the user after the installation. The user should only be allowed to access the instrument front panel where the display is located.
- Do not use the digital outputs for protection functions nor for power limitation functions. The instrument is suitable only for secondary protection functions.
- The instrument must be protected by a breaking device capable of interrupting both the power supply and the measurement terminals. It must be easily reachable by the operator and well identified as instrument cut-off device.
- The instrument and its connections must be carefully protected against short-circuit.

Precautions: Failure to respect the following instructions may irreversibly damage to the instrument.

- The instrument is equipped with PTC current limiting device but a suitable external protection fuse should be foreseen by the contractor.
- The outputs and the options operate at low voltage level; they cannot be powered by any unspecified external voltage.
- The application of currents not compatible with the current inputs levels will damage to the instrument.

Further documentation may be downloaded from our web site www.electrex.it.

This document is owned by company AKSE that reserves all rights.

DECLARATION OF CONFORMITY

Akse hereby declares that its range of products complies with the following directives EMC 89/336/EEC 73/23CE 93/68 CE and complies with the following product's standard CEI EN 61326 – IEC 61326 CEI EN 61010 – IEC 1010.

The product has been tested in the typical wiring configuration and with peripherals conforming to the EMC directive and the LV directive.

Subject to modification without notice. Edition 26-02-2009.

The instrument is programmed with the following default values:

PAGE	AVAILABLE PARAMETERS	DEFAULT
PASSWORD	0000 ... 9999	0000
RS485		
RS 485 ADDRESS	1 ... 247	27
Comm. Speed	2400, 4800, 9600, 19200, 38400	38400
Data Bit	7 o 8	8
Parity	N = no parity, E = parità pari, O = parità dispari	N
Bit of stop	1 o 2	2
NETWORK		
Type (nota n.1)	3PH-3W-2CT, 3PH-4W, 2PH-2W, 1PH-2W	3PH-4W
Export	NO, YES	NO
CT	10000/1 o 5	5/5
VT	400000/300	1/1
AVG-MD TIME (nota n.2)		
POWERS	1...60 (minuti)	15
CURRENTS	1...60 (minuti)	8
ALARM 1 / A (nota n.11)		
MODE (nota n.3)	Normale, 1-OF-3, 3-OF-3, DERIV, UNBAL	NORMAL
TYPE (nota n.4)	MAX, MIN	MIN
MEAS (nota n.5)	Misura controllata. Vedi tabella n.1 per la selezione del registro	200
THRE (nota n.5)	Valore soglia	0
ALARM 1 / B		
HYST	1...100 (%)	1
DELAY	1...99 (secondi)	1
AVG (nota n.6)	1...99 (secondi)	1
OUT (nota n.7)	Normal, Hold, Pulse-L, Pulse-S	NORMAL
ALARM 2 / A (nota n.11)		
MODE (nota n.3)	Normale, 1-OF-3, 3-OF-3, DERIV, UNBAL	NORMAL
TYPE (nota n.4)	MAX, MIN	MIN
MEAS (nota n.5)	Misura controllata. Vedi tabella n.1 per la selezione del registro	200
THRE (nota n.5)	Valore soglia	0
ALARM 2 / B		
HYST	1...100 (%)	1
DELAY	1...99 (secondi)	1
AVG (nota n.6)	1...99 (secondi)	1
OUT (nota n.7)	Normal, Hold, Pulse-L, Pulse-S	NORMAL
ALARM 3 / A (nota n.11)		
MODE (nota n.3)	Normale, 1-OF-3, 3-OF-3, DERIV, UNBAL	NORMAL
TYPE (nota n.4)	MAX, MIN	MIN
MEAS (nota n.5)	Misura controllata. Vedi tabella n.1 per la selezione del registro	200
THRE (nota n.5)	Valore soglia	0
ALARM 3 / B		
HYST	1...100 (%)	1
DELAY	1...99 (secondi)	1
AVG (nota n.6)	1...99 (secondi)	1
OUT (nota n.7)	Normal, Hold, Pulse-L, Pulse-S	NORMAL
ALARM 4 / A (nota n.11)		
MODE (nota n.3)	Normale, 1-OF-3, 3-OF-3, DERIV, UNBAL	NORMAL
TYPE (nota n.4)	MAX, MIN	MIN
MEAS (nota n.5)	Misura controllata. Vedi tabella n.1 per la selezione del registro	200
THRE (nota n.5)	Valore soglia	0
ALARM 4 / B		
HYST	1...100 (%)	1
DELAY	1...99 (secondi)	1
AVG (nota n.6)	1...99 (secondi)	1
OUT (nota n.7)	Normal, Hold, Pulse-L, Pulse-S	NORMAL
ANALOG OUT 1		
MEAS (nota n.5)	Controlled measure. See table n.1 for register selection	200
MODE	4-20, 0-20	4-20
LOW (nota n.9)		000.00
HIGH (nota n.9)		000.00
ANALOG OUT 2		
MEAS (nota n.5)	Controlled measure. See table n.1 for register selection	200
MODE	4-20, 0-20	4-20
LOW (nota n.9)		000.00
HIGH (nota n.9)		000.00

MECHANICAL CHARACTERISTICS

Enclosure	Self-extinguishing plastic material class V0
Protection degree	IP40 on front panel
Dimensions	70 x 90 x 58 mm (4 DIN modules)

VOLTAGE INPUT

Direct	Up to 300 Vrms phase-neutral or 519 Vrms phase to phase
With external PT(VT)	Primary: programmable (max. 400 kV) Secondary: programmable (max. 300 V)
	Overload: 900 Vrms phase to phase for 1 sec
Power supply	230/240Vac +/- 10% 50/60Hz
Self consumption	< 3VA

MODELS


PFA7411-62	ATTO D4 RS485 230-240V 2AO4-20MA TRANSDUCER / ENERGY ANALYZER
------------	---

NOTE n.7	
NORMAL	Physical output of the alarm excited during the duration of the alarm. It restores automatically
HOLD	Output remains excited until manual reset made via Modbus
PULSE-L	Output generate a 500ms impulse when the alarm goes on.
PULSE-S	Output generate a 100ms impulse when the alarm goes on.
NOTE n.8	
ALLARME 1	Alarm related to the physical output: DIGITAL OUT 1 (DO1, terminal 8)
ALLARME 2	Alarm related to the physical output: DIGITAL OUT 2 (DO2, terminal 9)
ALLARME 3	Only MODBUS alarm
ALLARME 4	Only MODBUS alarm
NOTE n.9	
LOW	Associated scale value starts at 0 and 4 mA
HIGH	Full scale value associated with 20 mA

F	Float IEEE754
I	Integer
B	Bitmapped

ANALOGUE OUTPUTS CONNECTION

ANALOGUE OUTPUT	
C	Common (negative)
1	Output 1 (positive)
2	Output 2 (positive)

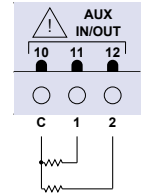

Max 250 ohm


For loads with impedance less than or equal to 250 ohms apply what has been written above.

For loads with higher impedance of 250 ohms it is necessary to include in series an external power supply. The voltage to be applied is given by the following formula:

$$V = (R-250) \times 0.027$$

Eg. with an impedance of 1 ohm, the voltage to be applied is:


$$(1000-250) \times 0.027 = 20.25 \text{ Vdc}$$

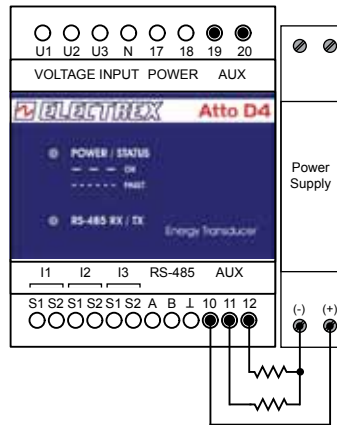

$$R_{\text{max}} = (V_{\text{dc}} / 0.027) + 250$$

Vdc	R max
5	435
9	583
12	694
24	1138

CONNECTION EXAMPLE

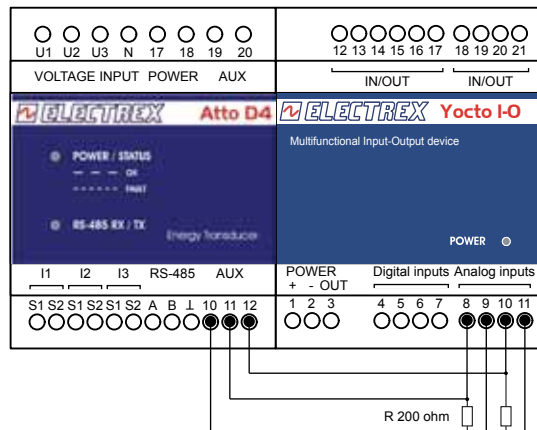

In this case the load resistance applied to the two outputs of 4-20 mA of the Atto is reported to be 200 ohms. This value corresponds to the resistance applied to the instrument Yocto IO to use its inputs as analog inputs 4-20 mA. Requires no external power, since less than 250 ohms.

VOLTAGE AND CURRENT CONNECTION

Voltage connection

Use cables with max cross-section of 2,5 mm² if flexible 4 mm² if rigid and connect them to the terminals marked voltage input on the instrument according to the applicable diagrams that follow.


Current connection

It is necessary to use external CTs with a primary rating adequate to the load to be metered and with a 5A or 1A secondary rating. The number of CTs to be used (1, 2 or 3) depends upon the type of network. Connect the CT output(s) to the terminals marked I1, I2, I3 (current input) of the instrument according to the applicable diagrams that follow. Use cables with cross-section adequate to the VA rating of the CT and to the distance to be covered. The max cross-section for the terminals is 4 mm².



N.B. The CT secondary must always be in short circuit when not connected to the instrument in order to avoid damages and risks for the operator.

Warning: The phase relationship among voltage and current signals, the P1-P2 orientation and the S1-S2 connection of the CT(s) must be carefully respected. All disregard of this rule or of the wiring diagram leads to severe measurement errors.


3W Delta (3 wire) 3PH-3W-2CT

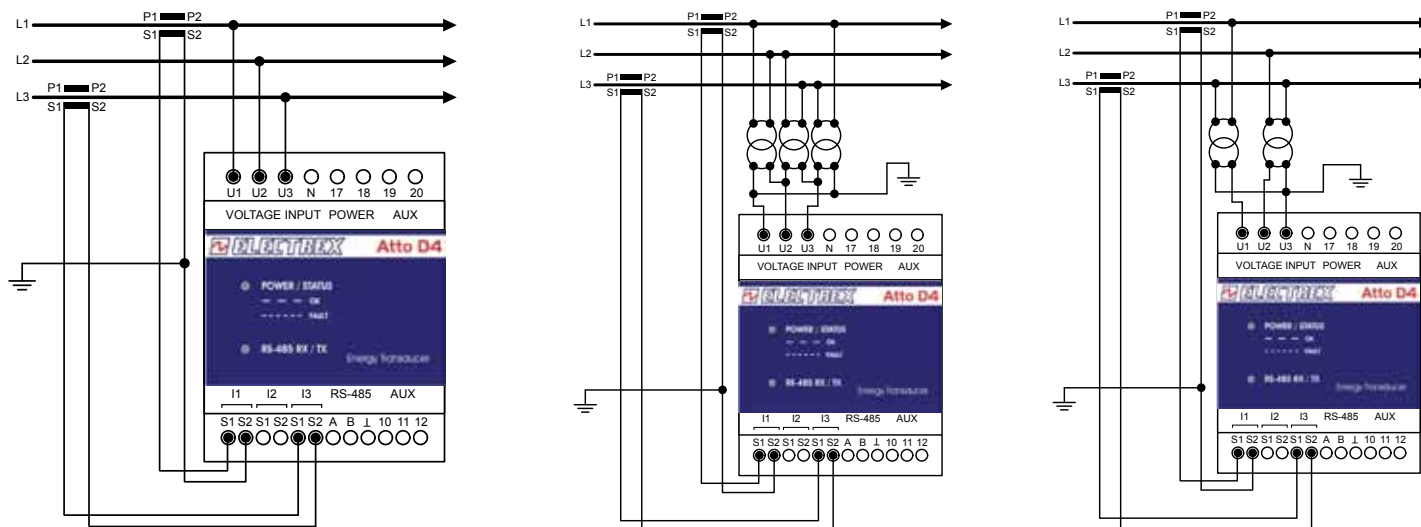


4W Star (4 wire) 3PH-4W

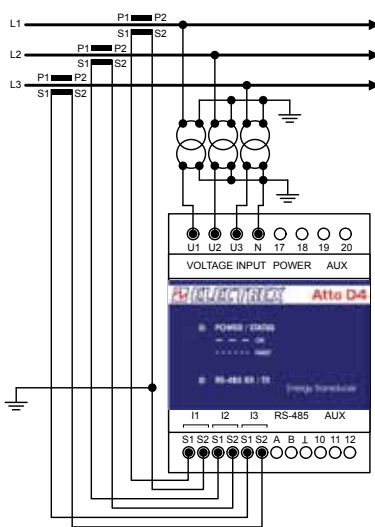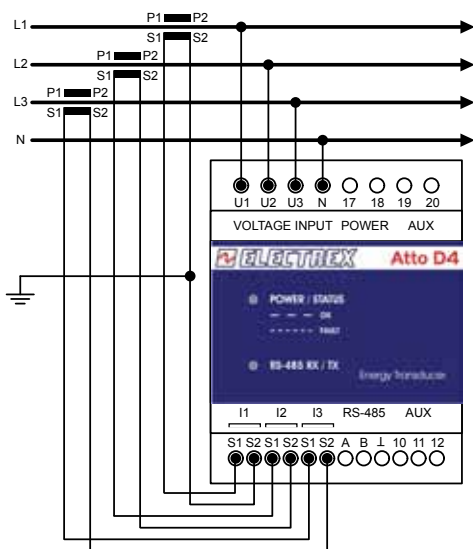

BI-PHASE 2PH-2W

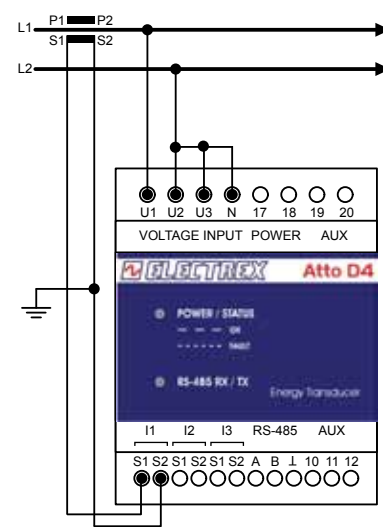

SINGLE PHASE 1PH-2W

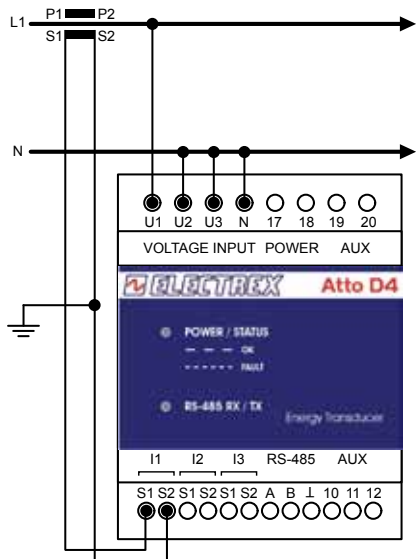

POWER SUPPLY AND SERIAL LINE CONNECTION

The instrument is fitted with a separate power supply. The power supply terminals are numbered (17) and (18). Use cables with max cross-section of 2,5 mm² if flexible, 4 mm² if rigid.

